




## **SAFESPACE ELEVATOR RANGE**

HYGIENIC AIR AND SURFACE  
PROTECTION

PRODUCTS: ELEVATOR PURIFIER

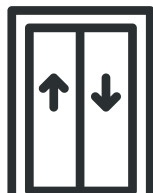


**AIRsteril<sup>®</sup>**

**T:** 01234 871 875

**E:** [sales@airsteril.co.uk](mailto:sales@airsteril.co.uk)

**W:** [www.airsteril.co.uk](http://www.airsteril.co.uk)



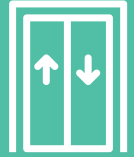

## THE MOST ADVANCED ELEVATOR CAR DISINFECTION TECHNOLOGY PROVEN TO KILL HARMFUL VIRUSES AND BACTERIA

### THERE ARE MANY AREAS WITHIN A BUILDING WHERE SOCIAL DISTANCING IS SIMPLY NOT POSSIBLE, THE MOST OBVIOUS OF WHICH IS AN ELEVATOR

- The Safespace elevator range technology can remove up to 99.99% of airborne microbes in minutes.
- Designed using the elevator expertise of Formula systems and proficiency in infection control technology from AIRsteril.
- The most advanced viral and bacterial control technology of its kind
- Constantly reduce contamination both the air and surfaces within an elevator car.
- Control harmful bacteria and viruses 24 hours a day, 365 days a year.



#### › COMMON PROBLEMS

Elevators are a key requirement in multi-storey buildings and measures like social distancing and regular cleaning can create long delays. Cleaning is often impractical during the busiest periods and cannot prevent airborne infections.

Viruses, bacteria, allergens and mould are constantly present in the air around us, with the design of many buildings and air handling systems increasing the chances of them being distributed across wide areas. High numbers of individuals can pass through an elevator in a working day. The more people passing through an area, the higher risk of infections spreading which increases absenteeism and associated costs.


A person unknowingly harbouring an airborne infection can spread the associated risk over a large area. Individuals who can be conscious of not coughing or sneezing in more public areas may be much less concerned about the same activities in "unseen areas" like an elevator which is another reason controlling microorganisms here is an essential part of any company's infection control strategy.

#### › ADDITIONAL PRODUCT BENEFITS

- › Proven to kill viruses and bacteria
- › Eliminate unpleasant odours
- › Enhanced protection for both staff and visitors
- › Fan driven for consistent performance
- › Safe and suitable for use in enclosed areas of continuous occupation
- › Single unit offers coverage of up to 18m<sup>3</sup>
- › Maintenance only once per year
- › Technology proven to reduce absenteeism
- › LED indicator confirms correct unit operation and advises when lamp change required

#### › PERFECT FOR USE IN

- › Shopping elevators
- › Cargo elevators
- › Warehouse elevators
- › Residential elevators

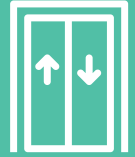

## THE MOST ADVANCED ELEVATOR CAR DISINFECTION TECHNOLOGY

› Image showing concealed unit above cab ceiling



› Only inlet and outlet vents visible from within cab



### › SERVICING MADE EASY

Power must be disconnected before attempting any servicing and only undertaken by a competent individual. All AIRsteril suppliers can arrange fully trained engineers to carry out servicing work

The cover is easily removed by loosening screws, then the lamp can be replaced and dust or debris build up cleared from the fan and interior.

Once power is re-activated the LED lamp reminder system is reset. Lamps must be changed on an annual basis to maintain performance.

### › HOW OUR SAFESPACE SYSTEM WORKS

All AIRsteril units utilise our unique combination of 5 technologies. They eliminate unpleasant odours and control harmful bacteria and viruses 24 hours a day, 365 days of the year.

Operation is indicated by a green indicator LED within the centre of the outlet vent, this confirms the lamp at the core of the treatment chamber is working well. The unit lamp requires replacement after 12 months of operation, the indicator LED changes to red in order to highlight when the lamp requires replacement.

The Safespace elevator range units are specifically designed for continuous operation via a fused spur, in elevators or similar environments where a concealed unit is required.

**LAB**  
TESTED  
TECHNOLOGY



SGS



POURNET



## TECHNICAL DETAILS

### Unit Dimensions

410mm (L) x 130mm (W) x 95mm (D)

### Power Supply

220-240V, 50-60Hz 17watts

### Set Up

Unit concealed with only inlet and outlet vents visible in cab ceiling

### Construction


Polycarbonate moulding

### Weight

1.5kg

### Operation

Continuous operation

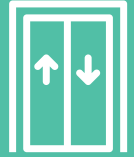

### THE MOST ADVANCED BACTERIA CONTROL TECHNOLOGY OF ITS KIND, USED BY THE BEST PROFESSIONALS IN THE BUSINESS



#### › OPERATION AND SAFETY

The unique balance of technology used by AIRsteril has been tried, tested and refined over many years to ensure the best achievable results with every unit is supplied.

- Due to the unit design, UV light cannot escape the unit from any angle meaning it is completely safe.
- Ozone levels used are substantially below the most stringent emissions regulations in the world.
- All electrical connections enter the unit via a single insulated cable and are completely shielded internally by the cover.

#### PHONE NUMBER

**01234 871 875**

#### › HOW OUR TECHNOLOGY WORKS

A unique balanced combination of technologies working together:

##### Internal Technology

- Germicidal Irradiation by Ultraviolet light kills microorganisms
- PCO – Photocatalytic Oxidation breaks down harmful Volatile Organic Compounds.
- Dual waveband UV combined with the catalyst both creates and breaks down Oxygen molecules generating Ozone and Superoxide Ions, air leaves the unit as "Plasma Quatro"

##### Transmitted technology

- Air leaves the unit as Plasma Quatro, it is propelled from the unit and will then fall towards ground level removing contaminants in its path:
  - Superoxide Ions charge airborne contaminants causing them to cluster together and fall from the air as they become too heavy, aiding all other processes. This can remove airborne particulates down to 0.001 microns.
  - Targeted Ozone gets to the hardest to reach areas breaking down contamination and creating a fresh pleasant environment.

The custom designed system ensures that contaminated air processed through the unit achieves optimum dwell time in the purifying chamber. As the processed air leaves the unit, it then itself becomes an efficient cleaning agent.



#### ADDRESS

##### Airscience Technology International Ltd.

Unit 23, High Barns Farm, Roxton  
Bedfordshire, MK44 3ET, UK

**Phone:** +44 (0) 1234 871 875

**Fax:** +44 (0) 1234 420 170

**E-Mail:** [info@airsteril.co.uk](mailto:info@airsteril.co.uk)

**Website:** [www.airsteril.co.uk](http://www.airsteril.co.uk)